

5.4 Replaceable Spare Parts

When ordering spare parts, always include the analyzer model and serial number.

Description	P/N
Connector – I/O (10 pin)	50980743
Connector – Remote Sensor (6 pin)	50980742
Display 3.5 digit	54218506
Display 4.5 digit	54218508
Electrolyte	DF-EO5
Filter Element – Coarse	64005011
Filter Element – Fine	64005012
Flow Meter	11220841
Flow Meter w/Valve	11220842
Fuse 100 mA (Used in 4-20 mA option)	45002504
Fuse .5A (Used for 110 VAC operation)	45002361
Fuse .25A (Used for 220 VAC operation)	45002301
Manual - User	99000025
Manual - Installation	99000026
PCB - Alarm	10423440
PCB - Main	10423430
Power Cord 110v	59017300
Pump	63000303
Ribbon Cable – Display to Main PCB	13326060
Ribbon Cable – Switch Bank to Main PCB	13326070
Sensor	Call Delta F

Table 9: Spare Parts