


QUICK START GUIDE - CHATTERBOX

CONNECT



- Connect Inputs
 - Connect Battery
 - Connect AC power
 - Connect Phone Line
- Section 3.0 of
Owners Manual*

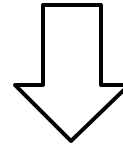

PROGRAM DIALER:

To program dialer at the front panel press 1 then PROGRAM. Put in program code followed by ENTRY COMPLETE (EC) for each instruction. Press NORMAL to exit program mode. *Section 7.0*

Procedure

Example

Clear Memory:
Momentarily short JB3

Enter Phone Numbers
(you must enter at least 1 phone number)

Set Touch Tone dialing
(recommended) This code is a toggle, switching between touch tone and pulse each time

Set Alarm Criteria for all channels:
use ZZ12 for normally open
use ZZ11 for normally closed
use ZZ13 for no alarm reporting

Manually Clear Alarm Flags:
This clears Acknowledged Alarms

71 658 6713 EC
(phone # 1)


81 EC

0112 EC (CH1 N.O.)
0811 EC (CH8 N.C.)
1613 EC (CH16 no alarm)

850 EC
851 EC

Section 4.0

TEST

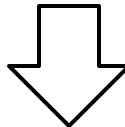

- Verify that each sensing device will trip the dialer
- Verify that the dialer will reach each phone number on call out.
- Clear dialer of all test alarms and clear alarm flags

Section 4.0