Important Model 848T Installation Considerations
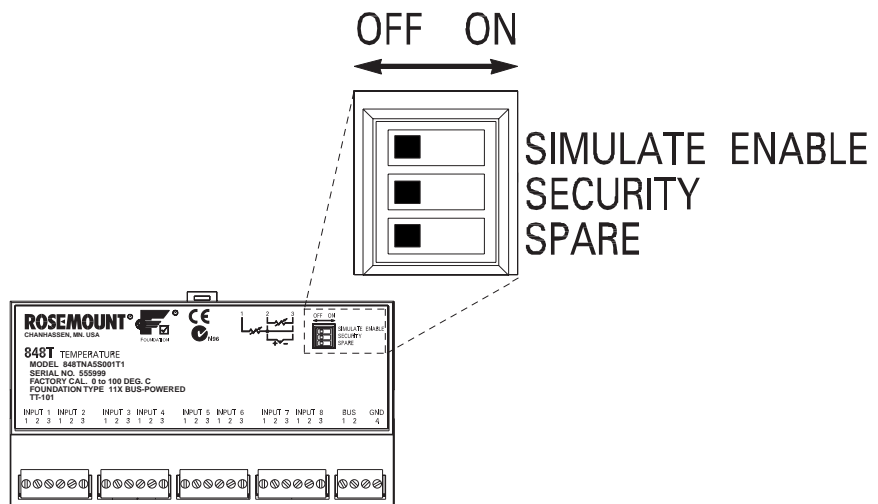
SPARE SWITCH

The Model 848T has three switches (see Figure 1-1) that are labeled:

- SIMULATE ENABLE
- SECURITY
- SPARE

The default setting for all switches is "OFF." Please refer to the product manual (document number 00809-0100-4697) for more information about the SIMULATE ENABLE and SECURITY SWITCH.

The SPARE switch is only used for product engineering and development purposes and should always remain in the "OFF" position. If the switch is turned to the "ON" position and power is applied, the Model 848T will not be present on the Fieldbus segment.

Figure 1-1. Switch Location on the Model 848T

‖‖‖‖‖‖‖‖‖‖‖‖‖‖‖‖‖‖‖‖

EMERSON
Process Management