

Continuous Emissions Monitoring System

- Compact, accurate and powerful multi-channel emissions monitoring system
- Field-mountable, NEMA 4X (-30 to 50°C ambient temperature range) design eliminates the need for high-cost shelters
- Time-proven, highly accurate/sensitive gas detectors:
 - paramagnetic (O₂), NDIR (CO), chemiluminescent (NO_x) and NDUV (SO₂) detectors
- Semi-conductor industry-standard PC-104 electronics allow for easy plug and play
- Ultra-flexible pocket PC display/keypad
- HTML “web-browser” operator interface provides user display and interface from anywhere in the world via the world wide web
- Built-in data acquisition handling system
- 40 CFR Part 60/75-compliant
- Independent analysis and sample conditioning enclosures allow maximum installation flexibility
- Robust sample conditioning components
 - Heated sample line not required
- Modular, cost-effective, two-point stream switching option capability – MicroCEM TS
- Hazardous area, Class I, Div. II purged option



PRODUCT DESCRIPTION

Emerson's Rosemount Analytical MicroCEM™ is a compact, field-mountable continuous emissions monitoring system that uses proven extractive monitoring technology, is coupled with state-of-the-art measurement detectors and uses a semiconductor industry-standard PC-104 electronics platform for maximum measurement, communications and processing capabilities.

The MicroCEM system is designed to extract a sample gas, condition the sample, analyze the sample for the desired constituents and process the emissions data by utilizing the required calibration validation calculations/procedures and oxygen diluent corrections as stipulated in U.S. Environmental Protection Agency 40 CFR Part 60/75 regulations. The MicroCEM is also a data acquisition system that stores relevant raw/diluent corrected emissions, flags, calibrations and alarms for a period of three months.*

* Note that emission reports as specified in the user's particular state or federal regulations shall be configured and submitted by the user. An optional DAS can be provided by Rosemount Analytical.

MICROCEM COMPONENTS

The MicroCEM consists of two major components:

- Sample conditioning/probe enclosure
- Analysis enclosure

Sample Conditioning/Probe Enclosure (Sample Extraction)

The sample gas is extracted by a specially designed probe and is then conditioned within the MicroCEM sample conditioning enclosure. The enclosure is located at the sample port location and includes the following components:

- Housing
- Probe
- Cleaning
- Sample drying
- Sample pump
- Back pressure regulator
- Ball valve assembly
- Vents and drains



Sample Conditioning/Probe Enclosure

Housing

The housing is equipped with a weather-resistant NEMA 4X-rated enclosure and can handle ambient temperatures between -30 to 50°C. The housing is completely piped and wired and is accessible via bulkhead and terminal block termination points. All internal sample lines, fittings and valving are stainless steel, Teflon and polypropylene. The components within the housing are completely accessible via front door access.

Probe

A specially designed probe located on the sample conditioning enclosure extracts sample gas from the stack. The probe is constructed of 316 stainless steel. The probe tip is fitted with a sintered filter which can easily be changed and serviced. Calibration fittings are provided so that the system complies with guidelines for auto calibration as outlined in U.S. EPA 40 CFR Part 60/75 regulations. Rosemount Analytical provides a solenoid-operated valve for automatic blowback of the probe. Instrument air supply must be provided by the user.

A 4" mating flange is standard.

Cleaning

The gas sample is cleaned by two levels of filtration: primary filtration is performed at the probe tip by using a 0.5 micron sintered filter. The secondary filtration occurs after the sample pump.

Sample Drying

The MicroCEM system provides a dry basis gas measurement.

The sample gas is dried by a dual-pass thermoelectric chiller. The chiller cools the sample to a temperature of 4°C, +/-1°C. The resulting condensed moisture is continuously drained by a peristaltic pump while the dry sample gas is allowed to continue through the system.

The sample is then passed through a membrane-type, high efficiency permeation dryer that removes the remaining trace moisture in the sample, resulting in a sample dewpoint of -30°C. This low dewpoint eliminates the need for expensive heated sample line. Economical 1/4" size Teflon tubing may be used instead for additional cost savings.

Sample Pump

The sample pump is a positive displacement pump with a moving diaphragm. All wetted parts are 316 Stainless Steel and Teflon. In normal operation, the pressure at the pump outlet is set between 5 to 10 psi.

Back Pressure Regulator

The back pressure regulator is used to vent the sample gas flow in excess of that needed for analysis. This approach yields both minimum response time and higher analysis stability because of steady sample pressure.

Ball Valve Assembly


The ball valve assembly routes the stack sample into the sample conditioning stream. The calibration gas stream is routed through the probe and back into the sample-handling stream. Blowback air is routed through the probe.

Vents and Drains

All vented gases or drained fluids are vented through bulkhead unions.

Analysis Enclosure

The MicroCEM design includes an analysis enclosure which can be located at the sampling location at the bottom of the stack or in an environmental location. This enclosure is rated NEMA 4X and can be mounted beside the sample conditioning enclosure or remotely up to 300' away (20 second response time per 100').

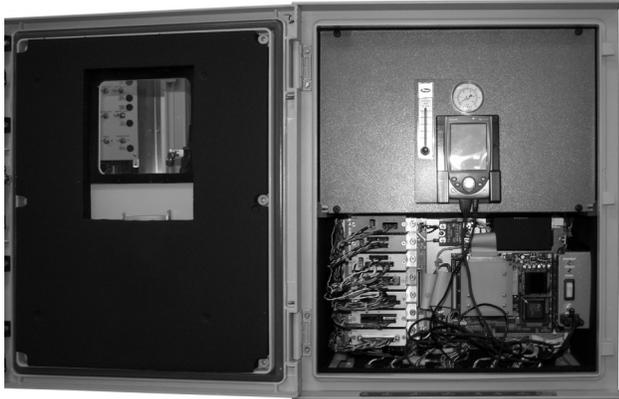

Inside Components

O₂ Detector (EO₂)

The oxygen measurement for diluent correction to determine emissions in the units is required by most regulations.

To accomplish this, Emerson Process Management uses a Rosemount Analytical robust, electrochemical oxygen detector. When sample gas is passed over a selective gas diffusion membrane, any oxygen present diffuses into an electrolyte. The oxygen is absorbed and is reduced to water. Lead oxide is developed at the anode. Electrons generated at the anode flow to the cathode of the cell producing a current that is proportional to the oxygen concentration. The principle offers a cost effective analysis with negligible interference, ease-of-maintenance and immunity from vibration. The standard range is 0 to 25%.

O₂ Detector (Paramagnetic)

The determination of oxygen is based on the measurement of the magnetic susceptibility of the sample gas. Oxygen is strongly paramagnetic, while other common gases are not. The detector is compact, has fast response (7 seconds) and a wide dynamic range. The long-life cell is corrosion-resistant and is easily cleaned. It has rugged self-tensioning suspension and is of welded, non-glued construction. The standard range is 0 to 25%.

CO Detector (NDIR)

The non-dispersive infrared method is based on the principle of absorption of infrared radiation by the sample gas being measured. The gas-specific wavelengths of the absorption bands characterize the type of gas while the strength of the absorption gives a measure of the concentration of the gas component.

The optical bench is employed using an infrared light source, analysis cell, a chopper wheel to alternate the radiation intensity between the reference and measurement side and a photometer detector. The detector signal alternates between concentration-dependent and concentration-independent values. The difference between the two is a reliable measure of the concentration of the absorbing gas component. The standard range capability between 100 to 1000 ppm is adjustable.

NO_x (Chemiluminescent)

The CLD consists of an ozone generator, chemiluminescence reaction chamber and a solid-state photodiode detector. The reaction chamber operates at atmospheric pressure, eliminating the need for the bulky vacuum pump found in other chemiluminescent instruments. The CLD reaction between ozone and nitric oxide is used to determine the presence of oxides of nitrogen (NO_x) in a sample gas. Nitric oxide and ozone readily react to form nitrogen dioxide in an electrically excited state. The excited NO₂ immediately reverts to the ground state, emitting photons. The light intensity is measured by the photodiode detector. The standard range capability is between 10 to 1000 ppm and is adjustable.

SO₂ Detector (UV)

The absorption measurement in the UV spectral range is based on the same principle as the IR measurement; a glow-discharge lamp is used as the UV radiation source. This UV radiation source immediately passes through the chopper wheel, through the filter cell and then into the dual section (Reference and Measurement) analysis cell. The radiation source is then passed through a second filter cell that is located after the analysis cell. The photodetector then converts the pulsating radiation intensities from measuring and reference side of the analysis cell into electrical voltages. The standard range capability is between 50 to 1000 ppm and is adjustable by user.

Automatic Calibration

To minimize the effect of long-term zero and span drift in each analyzer detector, the PC-104 system controller periodically initiates a calibration cycle as specified by the user. This feature assures reliable, accurate data while minimizing the attention required by operating personnel.

At adjustable intervals, the microprocessor will energize the appropriate valves which cause first zero, mid and then span gas to flow through each analyzer. When the analyzer readings stabilize, the microprocessor calculates the zero and span drift value for each detector. If a significant measurement deviation from the standard gas value exists, an alarm is generated and then reset.

PC104 System Controller/Data Acquisition System

The PC104 is a standard, PC-based platform and performs all hardware control, as well as provides select data processing capabilities for the MicroCEM. Both analog and digital inputs and outputs are provided, including data correction and average values.

Capabilities include:

- All automatic and manual functions
- Automatic calibration of each gas analyzer at selected time intervals to ensure accuracy and regulatory compliance
- Automatic backpurge control of sample probe with instrument air
- System limit and failure alarms
- I/O digital and analog signal interfaces
- Calibration correction factor for each analyzer output, data averaging for regulatory requirements (3 months data storage of 15 minute and 1 hour average, 1 week storage of 1 minute averages)
- Oxygen diluent correction and stores data as separate value
- Optional modem (HTTP web browser) viewing/internet data download capability. Menu and data accessible from anywhere in the world from any PC via the internet
- RS232, RS485 or Ethernet links use state-of-the-art TCP/IP communications capabilities
- Single button initiate to download data into Excel format. Simple regulatory reports can then be tailored by the user
- Two optional analog inputs (MW and fuel flow)
- Data for the following:
 - O₂% measurement and status flag
 - CO ppm measurement and status flag
 - CO ppm diluent corrected and status flag
 - NO_x ppm measurement and status flag
 - NO_x ppm diluent corrected and status flag
 - Data logs to view: date, time, 1 minute average, 15 minute average, 1 hour and 24 hour average
 - O₂/CO/NO_x data
 - complete trouble/limit alarm log
 - complete zero, mid and span calibration summary; manual calibration summary

Pocket PC Display

The MicroCEM analysis enclosure internally employs a standard, robust pocket PC which runs on Microsoft® Windows CE. The pocket PC is very flexible and allows the user to easily scroll through menus and view the data with the high resolution display. The pocket PC can also be removed from the enclosure and operated via a 4' cable.

Sample and Calibration Gas Distribution

- The gas and calibration gas samples are controlled by a single, adjustable total flow flowmeter with visual indication.
- The analysis enclosure is equipped with a 3-way universal solenoid that will accommodate the gas sample for either the normal stack gas sample or direct the calibration gases directly to the analyzers otherwise known as a local calibration.

- The MicroCEM is equipped with a manifold with three, two-way closed solenoid valves that will direct the calibration gases into the system. The three valves will be used for zero, mid and span gas calibrations respectively.
- The enclosure is equipped with a gas vent line.
- The chemiluminescent detector requires a continuous source of instrument air. The enclosure is equipped with a bulkhead fitting for this connection.

Accurate Enclosure Temperature Control

- The analysis enclosure is equipped with a compact and efficient environmentally-sealed thermoelectric cooling/heating air temperature control system. The enclosure is kept at a constant temperature (40°C, +/-1°C) enabling the analyzer to produce extremely accurate measurements due to the fact that the temperature control is stable and at an ideal temperature.

Two Point Stream Switch Option

For applications on SCR or Time Sharing between two stacks, the MicroCEM TS Stream Switch option is very efficient in both cost and space. For this option, a second probe/sample handling box is added to the physical configuration. An additional small external NEMA 4X switch box is also included for this option to control the sampling and calibrations to each stream. The second probe/sample handling box feature is unique in that it allows the MicroCEM to constantly flow a gas sample to the analysis enclosure on a continuous basis. This is important because this continuous flow allows the highest possible emissions measurement up-time compared to stream switch systems where only a probe pipe is included on the second stack. In this instance, the sample must travel the full sample line length to the sample handling components each time the stream is switched. This will cost the user precious time and emission data as time passes and also leads to inconsistent calibrations. This MicroCEM stream switch option was developed with the user in mind and employs easy to use user features such as:

- Stream times and bypass times are completely selectable by the user
- Stream switching can also easily be turned off
- Stream names are selectable by the user
- Track and hold features can be turned on or off for both calibration and bypass modes
- User ability to invalidate both stacks if one stack is invalid
- The Webbrowser will continuously display both streams for easy user viewing
- Three months data is stored for each stream
- Automatic calibration with user selectable times for both streams
- Ranges, dual ranges, drift failure %, calibration gases, alarms settings, calibration sequence and all other parameters can be adjusted for each stream and very user flexible

GENERAL SPECIFICATIONS – Analysis Enclosure

Power:	Universal power supply 85 to 125 VAC, 50 to 60 Hz, +/-10% 1000 watts maximum at start up, 500 watts nominal	Analog inputs:	2 (4 optional) 4 to 20 mAdc
Microprocessor:	Intel Celeron processor, 556MHz, 64MB RAM, PC/104 architecture, Microsoft® Windows NT-embedded platform	Digital Outputs:	Quantity 6 dry contact relay outputs; maximum 110 VAC at 1 amp load. Depending upon configuration: O ₂ limit exceed, CO limit exceed, NO _x limit exceed, SO ₂ limit exceed, Data Valid, In calibration, In Mainte- nance, Stream Indicator and Trouble Alarm
Display:	Pocket PC: 206MHz, StrongArm processor, 32MB RAM, 32MB ROM, 240 X 320 pixels LCD, TFT color, backlit wireless LAN optional	Digital Inputs:	Quantity 3 (optional 6) interro- gated with 5 VDC typically used for Process on/off, Flame Detect, Boiler Shutdown or Calibration Initiation.
Detectors//Number:	NDIR, paramagnetic, electro- chemical, chemiluminescent NDUV; up to three in one analyzer	Instrument Weight:	75 lbs. (typical)
Mounting:	Wall-mount*	Size:	32" X 28" X 12" (H W D) typical
Area Classification:	General purpose / NEMA 4X (IP 65) fiberglass enclosure	Ranges:	O ₂ : 0 to 25% CO: 0 to 100 ppm selectable to 1000 ppm NO _x : 0 to 10 ppm selectable to 1000 ppm SO ₂ : 0 to 50 ppm selectable to 1000 ppm
Compliances:	CSA (pending)	Instrument Air Requirements:	NO _x requires 1 liter/minute instrument grade air, -40°C dewpoint, 12.5 psig +/-0.5 psig.
Ambient Range:		Sample Temperature:	0° to 55°C
Temperature:	-30° to 50°C	Sample Flow Rate:	.5 to 1.5 liters/minute
Relative Hum:	5 to 99%	Warm-up Time:	Maximum 45 minutes at low ambient temperatures
Inputs/Outputs:			
Digital:	RS485 multi-drop network RS232 serial data Ethernet 10/100-base modem		
Connectivity Protocols:	HTML (web browser) – Status, file transfer, modem/web browser TCP/IP		

* Avoid installing the enclosure in direct sunlight if high ambient temperatures are possible.

	Paramagnetic O ₂	Electrochemical O ₂	NDIR CO	Chemiluminescent NO _x	NDUV/SO ₂
Linearity	< +/-1%	< +/-1%	< +/-1%	< +/-1% ¹	< +/-1%
Zero Drift	< +/-1% /day	< +/-1% /day	< +/-1% /day	< +/- 1% /day ¹	< +/-2% per day
Span Drift	< +/-1% /day	< +/-1% /day	< +/-1% /day	< +/- 1% /day ¹	< +/-1% per day
Repeatability	< +/-1%	< +/-1%	< +/-1%	< +/-1% /day ¹	< +/-1%
Response Time (t₉₀)	10< +/-t ₉₀ < +/-15	10< +/-t ₉₀ < +/-15	15s< +/-t ₉₀ < +/-20s	15s< +/-t ₉₀ < +/-20s	30s < t ₉₀ < 45s
Influence of Ambient Temperature (-30° to 50°C)					
- On Zero	< +/-1%	< +/-1 %	< +/-2%	< +/-2%	< +/-1%
- On Span	< +/-2%	< +/-2 %	< +/-2%	< +/-2%	< +/-2%

¹ 0 to 10 ppm NO_x range is < +/- 3%.

GENERAL SPECIFICATIONS – Probe/Sample Handling Enclosure

Power:	Universal power supply 85 to 125 VAC, 50 to 60 Hz, +/-10% 750 watts maximum at start up. 500 watts nominal	Maximum Stack Temperature:	Optional off-stack remote mounting also available for above 600°F applications.
Mounting:	Customer flange mount (2 hole tap or wall mount for high temp. option)	Stack Pressure:	-5 to 15" water
Area Classification:	General purpose / NEMA 4X (IP 65) fiberglass enclosure	Sample Flow Rate:	1 liter/minute from sample handling enclosure to analysis enclosure
Compliances:	CSA (Pending)	Response Time:	Maximum distance between analysis enclosure and sample conditioning/probe enclosure is 300'. (response time is 20 seconds/100' with 1/4" tubing)
Ambient Range:		Probe Length:	48" length 316 Stainless Steel probe with .5 micron sintered filter. User to cut to length in field.
Temperature:	-30° to 50°C	Mounting Flange:	4" 150 lbs.
Relative Humidity:	5 to 99%	Sample Pump:	316 Stainless Steel diaphragm type
Instrument Weight:	85 lbs. typical	Instrument Air Requirements:	Instrument grade air required. 15 SCFM at 60 to 100 psig (30 seconds two times per day) Pressure regulation by user.
Size:	24" x 24" x 12" (H W D)		
Stack Sample Moisture:	Up to 25%		
Sample Cooler:	Thermoelectric dual pass chiller. Permeation tube (-30°C dewpoint. 5 liter/minute instrument grade air -40°C dewpoint) 60 to 125 psig		

Equipment to be Supplied by User


- Calibration gas bottles
- Calibration gas regulators, dual stage with CGA connector
- Instrument air supply
- 85 to 125 VAC, 50 to 60 Hz U.P.S. power supply
- Electrical interconnection wiring and tubing between the sample conditioning and analysis enclosures
- Wiring trays for electrical interconnection wiring
- Sample ports for probe connection
- Mounting hardware

* Avoid installing the enclosure in direct sunlight if high ambient temperatures are possible.


COST COMPARISON CHART

1 Year Ownership Cost Comparison		
ITEM	1 Year Cost MicroCEM	1 Year Cost Others
MicroCEM	\$75,000	\$80,000
DAS cost	\$45,000	\$60,000
Shelter cost	\$0	\$40,000
Annual shelter maintenance	\$0	\$5,000
Shelter installation	\$0	\$5,000
Analyzer installation	\$250	\$250
Peripheral installation costs	\$5,000	\$10,000
Certification	\$10,000	\$10,000
Installed sample line cost (250')	\$250	\$12,500
TOTALS	\$135,500	\$222,750
Savings PER MicroCEM =	\$87,250	

EXAMPLE MENU SCREENS

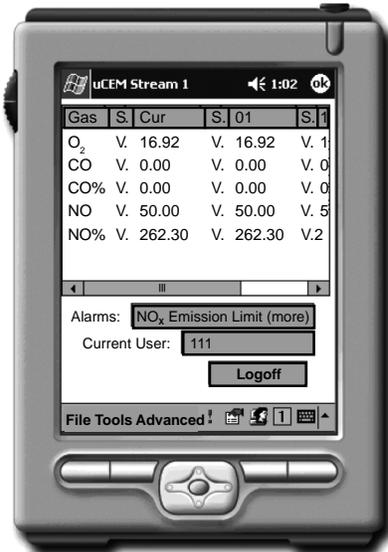

Main Screen 1

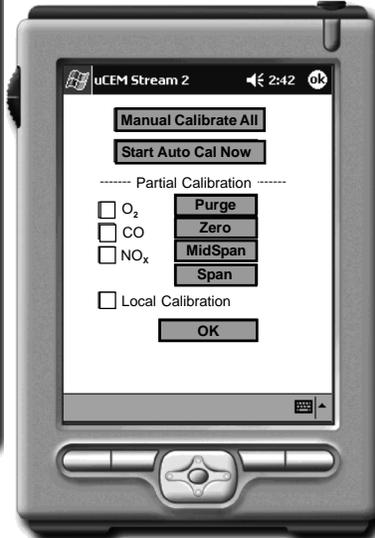


Manual Calibration




Auto-Calibration Settings



Alarm Logs

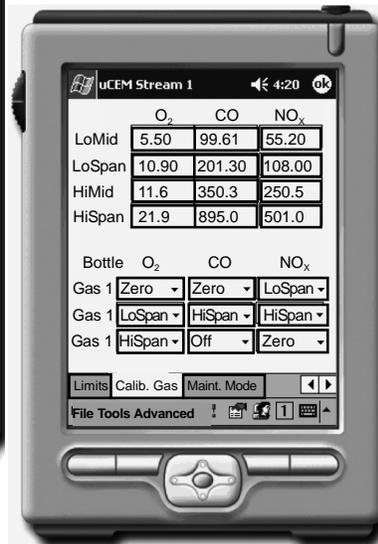

Calibration Bottle Settings

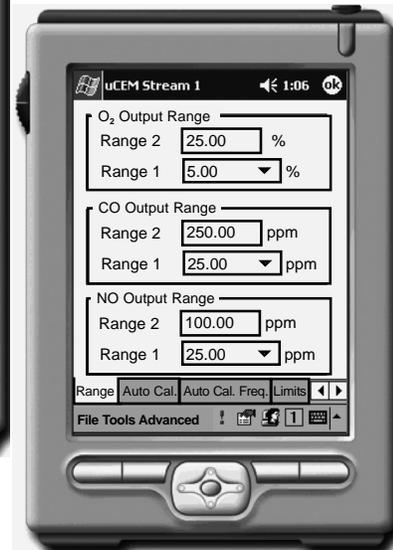

Settings 2

ORDERING INFORMATION

Model	Description
UCEMS	MicroCEM PC104-Controlled O ₂ /CO/NO _x CEM in a NEMA 4X Enclosure (UCEMS)

Level 1	Channel 1
	11 Single Channel Paramagnetic O ₂ (0-25%)
	12 Single Channel NDIR CO (Low range 0-10 ppm)
	13 Single Channel Chemiluminescent NO _x
	14 Single Channel Electrochemical O ₂ (0-25% range)
	21 Dual Channel Paramagnetic O ₂ - NDIR CO
	22 Dual Channel Paramagnetic O ₂ - Chemiluminescent NO _x
	23 Dual Channel Electrochemical O ₂ - NDIR CO
	24 Dual Channel Electrochemical O ₂ - Chemiluminescent NO _x
	31 Three Channel Paramagnetic O ₂ - NDIR CO - Chemiluminescent NO _x
	32 Three Channel Electrochemical O ₂ - NDIR CO - Chemiluminescent NO _x
	99 Custom

Level 2	Display Option
	01 Pocket PC with 4 ft. cord
	99 Special

Level 3	Modem Option
	00 None, HTML web browser standard
	01 Modem

Level 4	Input/Output Options
	01 Standard inputs/outputs
	02 Standard I/O with additional two analog inputs (necessary if customer MW and fuel flow signals are required for reporting.)
	99 Custom I/O

Level 5	Fiber Optic Output Option
	00 None
	01 Fiber optic output option (62.5 Micron with ST connectors)

Level 6	Special
	00 As-built
	99 Special

Option Notes	
General Notes:	<p>MicroCEM PC104-Controlled O₂/CO/NO_x CEM in NEMA 4X Enclosure</p> <p>Analysis Enclosure Standard Equipment: weather-proof NEMA 4X enclosure (-30 to 50°C ambient range); 3 automatic calibration Solenoid valves for zero, mid and span gasses; total flow flowmeter with meter adjust valve; Pentium-embedded PC104 processor; advanced monitoring menus; meets 40 CFR 60 regulations for calibration and diluent correctional values; automatic analog and digital signal processing; 3 months data storage for raw and diluent correct values; calibrations and alarms include: automatic or manual calibration. Also standard: standard inputs/outputs; 3 4-20 mA current individually isolated analog outputs (O₂, CO and NO_x instantaneous values). Digital outputs include: trouble alarm, sample pump on/off, drain pump on/off, purge on/off, calibrate on/off – 110 VAC at 1 A dry contact. Digital outputs include: O₂ limit exceed, CO limit exceed, NO_x limit exceed. TTL: 5-30 VDC maximum current 500 mA. Digital inputs include: process on/off, initiate auto calibration - RS485 multi-drop network; RS232 serial data; Ethernet 10/100-base TCP/IP communication protocol.</p>

ORDERING INFORMATION

Model	Description
UCEMTS	MicroCEM PC104-Controlled O ₂ /CO/NO _x Time-Sharing CEM in a NEMA 4X Enclosure (UCEMTS)
Level 1 Application Configurations	
11	Single channel, Paramagnetic O ₂
12	Single channel, NDIR CO
13	Single channel, NO _x
14	Single channel, Chem O ₂
15	Single channel, SO ₂
21	Dual channel, Paramagnetic O ₂ , NDIR
22	Dual channel, Paramagnetic O ₂ , NO _x
23	Dual channel, Chem O ₂ , NDIR
24	Dual channel, Chem O ₂ , NO _x
25	Dual channel, Paramagnetic O ₂ , SO ₂
26	Dual channel, Chem O ₂ , SO ₂
31	3 channel, Paramagnetic O ₂ , NDIR, NO _x
32	3 channel, Chem O ₂ , NDIR, NO _x
33	3 channel, Paramagnetic O ₂ , SO ₂ , NO _x
34	3 channel, Chem O ₂ , SO ₂ , NO _x
99	Special configuration
Level 2 Analog Output Options	
00	Standard analog outputs
01	Extended analog outputs
Level 3 Special Output Options	
00	None
01	Fiber optics (62.5 Micron)
99	Other special options
Level 4 uCEMS Configurations	
00	Basic MicroCEM System
01	Time Share MicroCEM System

ORDERING INFORMATION

Model	Description
USHS	MicroCEM Probe/Sample Handling System (USHS)

Level 1	Standard Interior Sample Handling System, In Fiberglass Enclosure	
	01	Standard SHS - Dual pass chiller, standard 4" 150 lb. flange, 4' probe, for applications to 400°F
	02	Standard SHS with 600°F option - Includes spool piece and extended 5' probe
	10	High temperature SHS, for applications to 1400°F - Off stack configuration
	99	Custom SHS - for higher temperature / high corrosion applications - special materials, pumps, valves

Level 2	Ammonia Scrubber	
	00	None
	01	Ammonia scrubber filter (Recommended for SCR applications)

Accessories	
Part #	Description
662170	Heated sample line option 10'
662195	Heated sample line option 15'
662196	Heated sample line option 25'
662197	Heated sample line option 50'

Probe/Sample Handling Enclosure Standard Equipment

NEMA 4X enclosure with compressor AC (-30 to 50°C)

48' length 316 Stainless Steel probe with .5 micron sintered filter. User to cut to length in field

Dual pass thermoelectric chiller with peristaltic pump

316 Stainless Steel diaphragm sample pump

Probe purge

Instrument grade air required. 15 SCFM at 60 to 100 psig (30 seconds 2 times per day)

Probe and direct local calibration

.5 micron probe filter

Permeation dryer (This will replace need for heated sample lines for outdoor applications when temperature is expected to go below 0°C.

User instrument air required at 5 liter/minute, -40°C dewpoint.

Maximum distance between analysis enclosure and sample conditioning/probe enclosure is 300'. (Response time is 20 seconds per 100' with 1/4" tubing)

* Consult Factory for Class I, Divisions II Applications

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available on request. We reserve the right to modify or improve the designs or specifications of our products at any time without notice.

Emerson Process Management
Rosemount Analytical Inc.
Process Analytic Division
1201 North Main Street
Orrville, OH 44667-0901 USA
T 330.682.9010
Toll Free in US and Canada 800.433.6076
F 330.684.4434
e-mail: gas.csc@EmersonProcess.com
www.raihome.com

© Rosemount Analytical Inc., 2004. All rights reserved.
Printed in U.S.A. on recycled paper. ♻

